



# InMax ¼ turn actuators – size M

Electrical rotary actuators for use in safe areas

On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension  
50 / 75 – 100 – 150 Nm without and 30 – 50 – 60 Nm with safety operation (spring return)

InMax - ...
InMax - ... - F
InMax - ... - S
InMax - ... - SF
InMax - ... - CTM

Subject to change!

## Compact. Easy installation. Universal. Cost effective. Safe.

Type	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram
InMax- 50.75	50 / 75 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	–	On-off, 3-pos.	–	SB 1.0
InMax- 100	100 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	–	On-off, 3-pos.	–	SB 1.0
InMax- 150	150 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 s/90°	–	On-off, 3-pos.	–	SB 1.0
InMax- 30 - F	30 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~ 20 s/90°	On-off, 3-pos.	–	SB 2.2 + 2.3
InMax- 50 - F	50 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~ 20 s/90°	On-off, 3-pos.	–	SB 2.2 + 2.3
InMax- 60 - F	60 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 s/90°	~ 20 s/90°	On-off, 3-pos.	–	SB 2.2 + 2.3
InMax- ... - S/SF	Types as above with 2 integral, potential free auxiliary switches, 5° and 85° angle of rotation					2 × limit switches	SB 3.0
InMax- ... - CTM	Types as above with aluminium housing and seawater resistant C5-M painting (cable glands brass nickel-plated)						

### Product views and applications

 
Safety damper



Ball valve



Throttle valve



### Description

The InMax actuators are a revolution for safety, control and shut-off dampers, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants.

IP66 protection, small dimensions, only 9,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected.

...Max...F actuators are equipped with spring return fail safe function. Standard shaft connection is a double square direct coupling with 16 × 16 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptors for ball valves and throttle valves and other armatures.

### Highlights

- ▶ Industrial use
- ▶ Universal supply unit from 24...240 VAC/DC
- ▶ Different motor running times 40–60–90–120–150 s/90°, adjustable on site
- ▶ Spring return running time ~ 20 s/90°
- ▶ On-off and 3-pos. control with or without spring return function
- ▶ 30–50–60–75–100–150 Nm actuators in the same housing size
- ▶ 100 % overload protected
- ▶ Compact design and small dimension (L × W × H = 288 × 149 × 116 mm)
- ▶ Direct coupling to the damper shaft with double square connection 16 × 16 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ▶ Robust aluminium housing (optional with seawater resistant C5-M painting)
- ▶ IP66 protection
- ▶ Simple manual override included + preparation for comfortable manual override
- ▶ Gear made of stainless steel and sinter metal
- ▶ Weight only ~ 9,5 kg
- ▶ Integral heater for ambient temperatures down to –40 °C
- ▶ Integral safety temperature sensor
- ▶ Integral equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable and adjustable auxiliary switches type ...Switch
- ▶ Wide range of accessories



Technical data	InMax- 50.75	InMax- 100	InMax- 150	InMax- 30 -F	InMax- 50 -F	InMax- 60-F
Torque motor (min.)	50 / 75 Nm selectable	100 Nm	150 Nm	30 Nm	50 Nm	60 Nm
Torque spring (F)	without F	without F	without F	min. 30 Nm	min. 50 Nm	min. 60 Nm
Dimension of external torque	Above mentioned torques are min. torques in blocked position, external torque should be max. 80 % of max. actuator torque but min. 10 Nm					
Supply voltage / frequency	24...240 VAC/DC, ± 10 %, self adaptable, frequency 50...60 Hz ± 20 %					
Power consumption	max. starting currents see ⓘ Extra information (in acc. with voltage, $I_{start} \gg I_{rated}$ ), approx. 5 W holding power, approx. 16 W for heater					
Protection class	Class I (grounded)					
Angle of rotation and indication	95° incl. ~ 5° pretension, mechanical value indication					
Working direction	Selectable by left/right mounting to the damper/valve shaft					
Motor running times	40 / 60 / 90 / 120 / 150 s/90° selectable on site					
Motor	Brushless DC motor					
Spring return (F)	without F	without F	without F	spring return in the event of loss of power		
Spring return running time (F)	without F	without F	without F	spring return in ~ 20 s/90°		
Safety operation	min. 10,000 in acc. with construction of damper and ambient					
Response time spring return	up to 1 sec. after power failure					
Control mode	On-off and 3-pos. in acc. with wiring, selectable on site					
Axle of the actuator	Double square 16 × 16 mm, direct coupling, 100 % overload protected					
Electrical connection	Cable ~ 1 m, diameter of wires 0.5 mm <sup>2</sup> . Connections require a terminal box!					
Diameter of cable	~ Ø 7.1 mm	~ Ø 7.1 mm	~ Ø 7.1 mm	~ Ø 7.4 mm	~ Ø 7.4 mm	~ Ø 7.4 mm
Cable gland	2 flying leads at each type ...-S and ...-SF					
Manual override	M16 × 1.5 mm standard cable and wire entries					
Integral heater	Use delivered socket wrench, max. 4 Nm					
Housing material	Integral, controlled heater for ambient temperature down to -40 °C					
Dimensions	Aluminium die cast housing, painted. Optional with seawater resistant C5-M painting (...-CTM)					
Weight	L × W × H = 288 × 149 × 116 mm, for diagrams see ⓘ Extra information					
Ambients	~ 9,5 kg aluminium housing					
Humidity	Storage temperature -40...+70 °C, working temperature -40...+50 °C					
Operation mode	0...90 % rH, non condensing					
Maintenance	100 % of ED are permitted (ED = duty cycle)					
Wiring diagrams	Maintenance free relative to function, maintenance must comply with regional standards, rules and regulations					
Delivery	SB 1.0	SB 1.0	SB 1.0	SB 2.2 / 2.3	SB 2.2 / 2.3	SB 2.2 / 2.3
Parameter at delivery	Actuator with 1 m cable, 4 screws M8 × 140 mm, 4 nuts M8, Allen key for simple manual override					
Parameter at delivery	50 Nm, 90 s/90°	100 Nm, 90 s/90°	150 Nm, 90 s/90°	30 Nm, 90 s/90°	50 Nm, 90 s/90°	60 Nm, 90 s/90°

### Approbations

EMC	2004/108/EC
Low voltage	2006/95/EC
IP-Protection	IP66 in acc. with EN 60529

### Special solutions and accessories

...-CTM	Types in aluminium housing with C5-M finish, parts nickel-plated
VAM	Enclosure in VA for ...Max actuators size M
InBox-...	Terminal boxes
MKK-M	Mounting bracket for boxes type ...Box-... directly on actuator
InSwitch	2 external aux. switches, adjustable
HV-MK	Comfortable manual override for ...Max actuators size M
AR-16-xx	Reduction part for 16 mm square connection to 14 or 12 mm shafts
Kit-S8	Cable glands nickel-plated
Adaptions	for dampers and valves on request
InMax-...-S3	Ambient temperature up to +60 °C (T4), 110...240 VAC/DC, 25 % ED



InMax-...

InMax-...-F

InMax-...-S

InMax-...-SF


Special makes

InMax- ... -CTM

**Electrical connection**

All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage!  
 The safety operation of the spring return function works if the supply voltage is cut.  
 For electrical connection a terminal box is required (e.g. InBox).  
 An over-current protection fuse < 10 A has to be provided by installer.  
 Note: the initial current is appr. 2 A for 1 second.

**Wiring diagram InMax- ... (without spring return)**

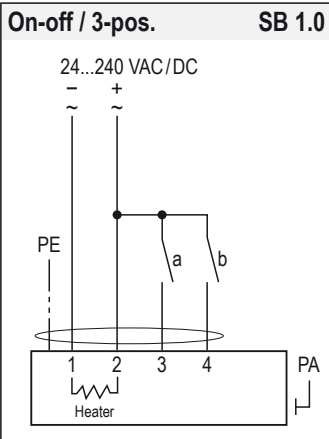


During commissioning apply a self adjustment drive.


Regard duty cycle at motor running times!

Never use spring return actuators without external load.

**Wiring diagram InMax- ... -F (with spring return)**

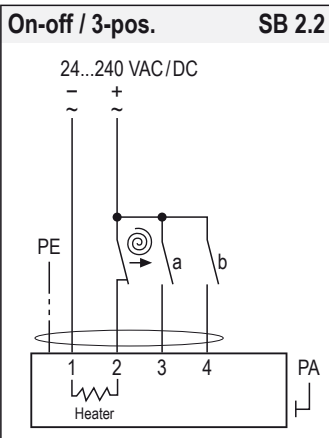


**On-off (1 wire) SB 2.3**

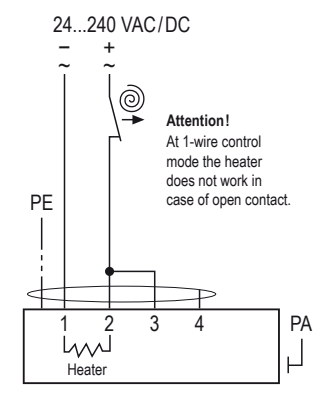

**Attention!**  
 At 1-wire control mode the heater does not work in case of open contact.

**Wiring diagram InMax- ... -S and ... -SF**

**Wiring of integral auxiliary switches SB 3.0**

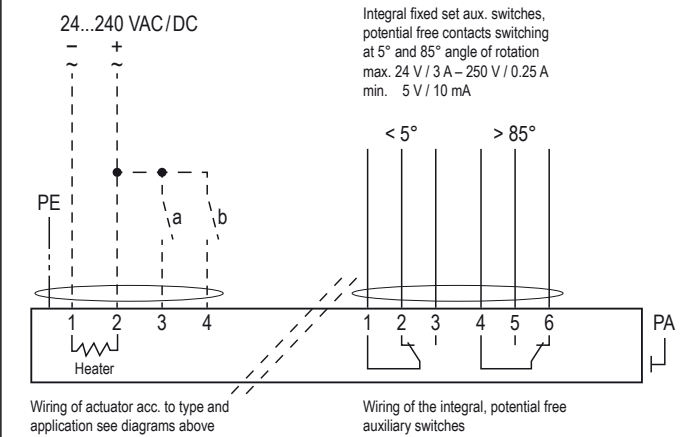


Wiring of actuator acc. to type and application see diagrams above

Wiring of the integral, potential free auxiliary switches

**Parameters, adjustments and failure indication**

**Switch – Push button – Lamp for adjustment (behind the blanking plug)**

10-position switch (S)  
 Push button (T)  
 3-colour LED

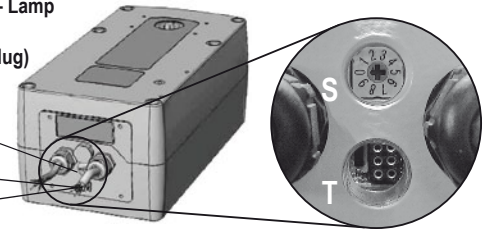

**Parameter selection**

Example:  
 InMax-50.75  
**Requested parameter:**  
 Torque 75 N  
 Motor running time 90 s/90°

Type	Torques
InMax- 50.75	50 N
InMax- 100	100 N
InMax- 150	150 N
InMax- 30 -F	30 N
InMax- 50 -F	50 N
InMax- 60 -F	60 N

Running times	Position of switch (S)
40 s/90°	00
60 s/90°	01
<b>90 s/90°</b>	<b>02</b>
120 s/90°	03
150 s/90°	04

**Result:**  
 Switch position 07

**Functions, adjustments and parameters**

**A) Self adjustment of angle of rotation:**

Switch (S) into position 02 (low torque) or 07 (high torque), then push button (T) for minimum 3 seconds. The actuator will drive into both end positions to be adjusted. LED indicates GREEN.

Adjustment time needs approx. 180 sec. (90 sec. "On", 90 sec. "Off"). After that, switch (S) into the position acc. with your required torque and running time.


**B) Selection of running time and torque:**

Put switch (S) into the correct selected position in acc. to above table. The selected parameter will work at next operation of the actuator. Adjustment can be done even without supply voltage. If supply voltage is available turn switch only if actuator is not running.

**C) Additional information for 3-pos. operation:**

a closed, b open = direction I      a and b closed = motor doesn't work  
 b closed, a open = direction II      a and b opened = motor doesn't work  
 The rotation direction (I and II) depends on left/right mounting of the actuator to the damper/valve. You can change direction of the motor by changing electrical wiring of terminal 3 and 4.

**Installation**

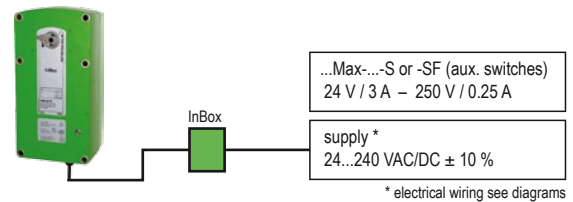

- Do not open the cover when circuits are live
- Supply cables must be installed in a fixed position and protected against mechanical damage
- Connect potential earth
- Avoid temperature transfer from process (e.g. hot gas) to actuator (note max. ambient temperature!)
- Ambient temperature -40...+50 °C
- Close all openings with min. IP66
- Regard all regional standards, rules and regulations
- For outdoor installation a protective housing against rain, snow and sun should be applied to the actuator, as well as a constant supply at terminal 1 and 2 for the integral heater
- Use for wiring a terminal box
- Actuators are maintenance free, an annual function test is recommended
- Clean only with damp cloth, avoid dust accumulation



InMax-...

InMax-...-F

InMax-...-S

InMax-...-SF

Special makes

InMax- ... -CTM

### Important information for installation and operation

#### A. Installation, commissioning, maintenance

All national and international standards, rules and regulations must be complied. For electrical connection an terminal box is requested (e.g. InBox-...).

**Attention:** If the actuator is put out of operation all rules and regulation must be applied. You have to cut the supply voltage before opening a terminal box!

The cable of the actuator must be installed in a fixed position and protected against mechanical and thermal damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66. For outdoor installation a protective housing against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integral heater. Actuators are maintenance free. An annual inspection is recommended. Actuators must not be opened by the customer.

#### B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

**Attention:** Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

#### C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 16 x 16 mm. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

#### D. 3-position control mode

...Max actuators are in the best way suitable for the 3-pos. operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ...Max actuators are protected via internal electronics. It ignores impulses < 0,5 s, the cyclic duration must be min. 0,5 s. At changing direction the pause is 1 s.

#### E. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

#### F. Operation at ambient temperatures below -20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to -40 °C ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

1. After mounting the actuator must be immediately electrically connected.
2. The heater switches on automatically when actuator reaches internally -20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
3. The adjustment options are only ensured after this heating up period.

#### G. Excess temperatures

All actuators are protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

#### H. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

#### I. Mechanical protection

The actuator must be operated with an outside load of at least 10 Nm. After installing the actuator to the damper/armature an automatic alignment has to be accomplished in order to obtain a "gentle" blockade/stop. This function protects the damper/armature by reducing the end position's/blockade speed in order to avoid mechanical overload. The actuator aligns specifically once with 90 s/90° onto each position and recognizes the blockade position in order to reduce the motor performance during operation briefly before reaching the end/blockade position.

#### J. Loss of voltage

In switch position 00, 01 and 05, 06 (motor running times 40 sec. and 60 sec.) and after interrupted voltage the actuator (types 50.75, 100 and 150 and ...-S) moves in OFF position then the actuators works regarding control signal.

### ⓘ Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

#### Accessory InSwitch – adaptable auxiliary switch



For an end or inclined position indication it is possible to retrofit external, adjustable auxiliary switches type InSwitch. The switch housing is mounted directly to the actuator and the switches are linked to the actuator's square connector. The switches deliver a potential free output and can be adjusted separately. They are connected by the included cable tail.

#### Accessory InBox – adaptable terminal box



For electrical connection of ...Max actuators a terminal box is required. InBoxes are appropriate terminal boxes and placed at the disposal. To adapt the ...Box directly to the actuator housing a mounting bracket type MKK-M is required.  
InBox- 3P for ...Max-... and ...Max-...-F  
InBox- Y/S for ...Max-...-S and ...-SF with integral auxiliary switches